Assembly Instructions for DBP/5BP Hub Kits

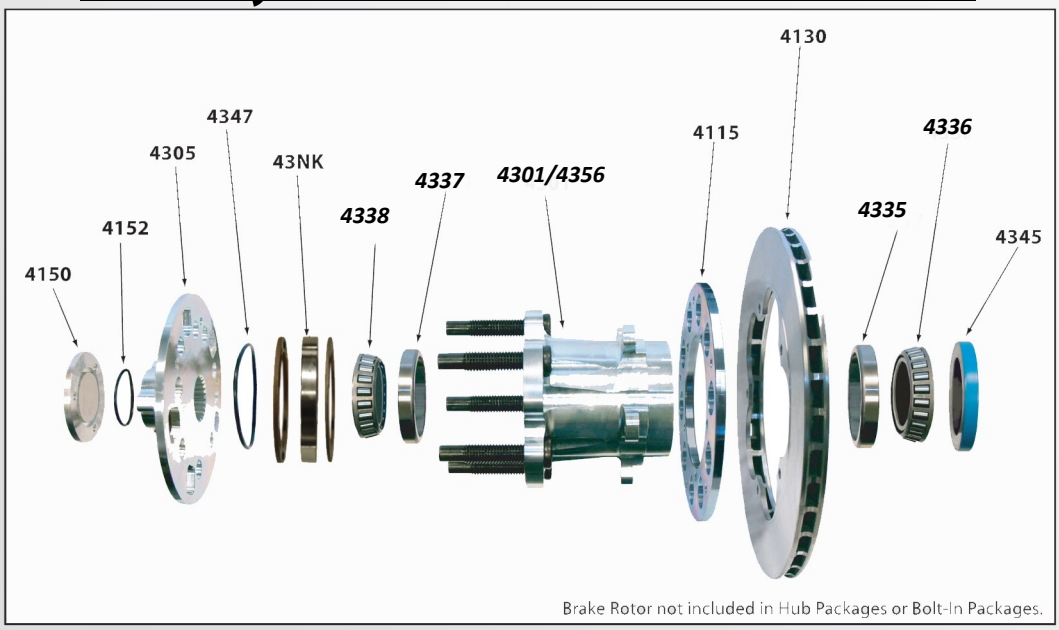

4150. Dust Cap
4152. Dust Cap O-Ring
4305. Drive Flange
4347. Hub O-Ring
43NK. Snout Nut, Washer, Lock Washer and Hardware
4338. Outer Hub Bearing
4337. Outer Hub Race
4301. Hub
4115. Steel Rotor Adapter
4130. Rotor
4335. Inner Hub Race
4336. Inner Hub Bearing
4345. Snout Seal

- These are general assembly instructions. Actual part numbers may vary for the package that you have purchased.
- Picture represents the parts included with Hub Package part # 4300P13C.
- Brake rotors are sold separately.

1. Before you begin the installation, clean the drive plate and the inside of the hub.

2. Install inner hub bearing (4338) into hub (4301). Bearing races (4335 & 4337) are already installed in both sides of hub.

3. Install hub seal (4345).

4. Install rotor adapter (4115) onto hub using provided bolts (4116).

5.Install rotor (4130) onto rotor adapter using provided bolts (4116). The side that the tabs are on faces outward.

6. Place hub with rotor installed onto snout.

7. Install outer hub bearing (4336).

8. Install lock washer (43NK).

9. Install snout nut (43NK) and tighten fully, then loosen the nut a quarter turn. Install 2 bolts and washers to lock down.

10. Place hub o-ring (4347) onto hub.

11. Install drive flange (4305) onto hub using the two provided bolts (4307).

12. Place dust cap o-ring (4152) onto dust cap.

13. Install dust cap (4150) onto assembly using the three provided bolts (4151).

Rev. IN21-55